

Regarding Rocket Punch : Please Read Before Opening

Should rocket punch (forearm area) disconnect during joint movement when armor parts are on please follow the below simple steps to re-apply.

Rocket Punch Attachment

- ① Bend elbow joint.
- ② Connect protruding points with indented points.
- ③ Rest your forefinger on the shoulder and thumb on the red cable in the elbow and squeeze firmly until the part clicks into place.

Point 1
Point 2
Point 3
Point 4

Lock
Cord

Connect protruding points with indented points.

Indented points (3points) rocket punch

upper right arm
protruding point (1point)

Point 1 Please confirm that upper arm armor (silver armor) is properly connected.

NG Top and bottom halves of upper arm silver armor are mismatched.

OK Top and bottom halves of silver armor are matched.

Point 2 Make sure rocket punch nozzle and receiving end on upper right arm are properly matched when connecting.

nozzle
rocket punch
upper right arm

Point 4 When rotating arm, please hold upper part of arm to avoid rocket punch from detaching.

NG Do not rotate by holding rocket punch. (forearm/fist area)

Point 3

When parts are properly aligned rest your forefinger on the shoulder and thumb on the red cable in the elbow and squeeze firmly until the part clicks into place. (See Image)

Click!

OK Rotate by holding upper arm.